


Installing Keylok Software for New DeZignWorks Users

From DeZignWorks CD

1. Insert the DeZignWorks CD into your computer, **DeZignWorks Core and Creative DeZign Device drivers should already be installed.**
2. Browse to a folder named DeZignWorks USB Key, go to item 3 listed below.


From Via Web <http://www.goreverseit.com/public/USB%20Device%20Installer/>
Select [Install.exe](#) copy this to your computer.
Once you have copied this to your computer go to item 3 listed below.

3. **Make sure you are at least admin local machine.**
4. Double click the file name install.exe.
5. Notice Graphics below, this is the pop up that will appear.
6. **Make sure the USB device is not on the computer**
7. Select USB Dongle
8. Select Standalone.
9. Select Begin Install.
10. Follow the prompts, you should see a windows prompt about new hardware device.
11. When install is complete select exit.

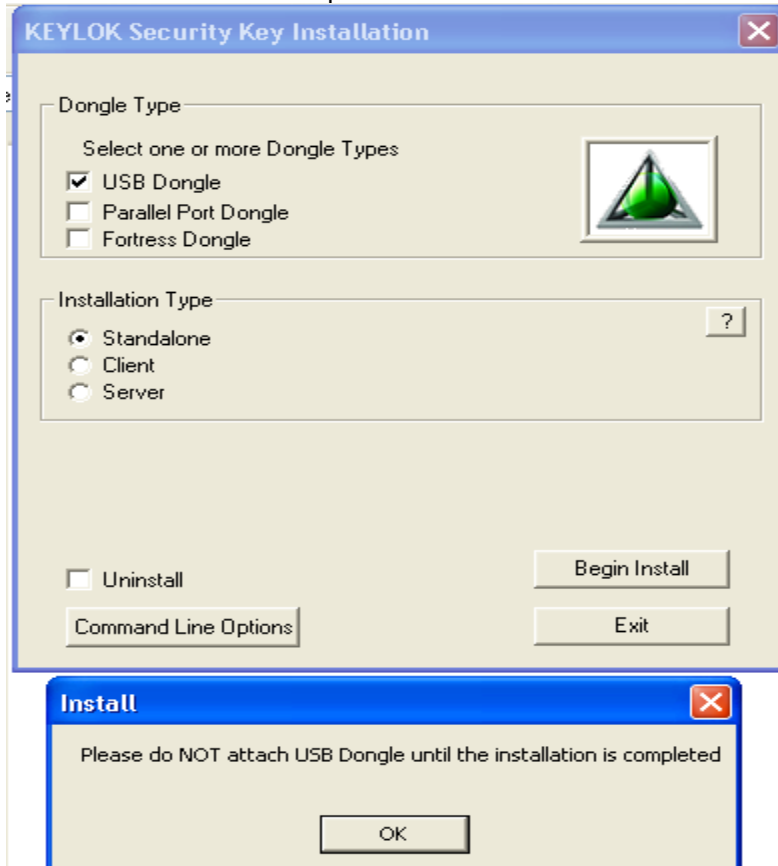

12. Start SolidWorks

13. You will see a prompt similar to the one below, If you have the DezinWorks USB device on your computer the ID number will appear in the Sim Number box, if you do not it will look like the one below.

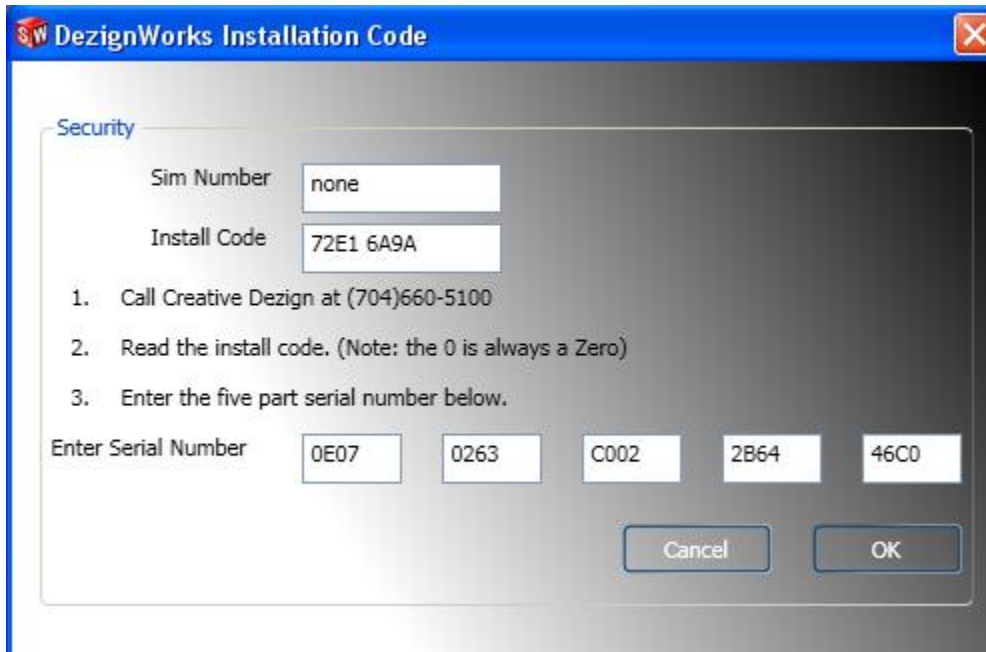

14. Contact Creative Dezin Concepts, by phone at 704-660-5100 or email support@gocreative.net and request a license code for your system.
15. Input the information from Creative Dezin Concepts
16. Select OK
17. DezinWorks should now be active.
18. We appreciate your business.

Sincerely,

Jim Watson
President